

TOOLS & HARDWARE

Included


-  (1) 3/32" Adjustment Rod
-  (2) #1/4-20 x 3/4" PHPH Screw
-  (2) #1/4-20 Cap Nut
-  (2) #1/4 Split Lock Washer
-  (4) Stop Pin (pre-installed in hinges)

Not included

-  Phillips head screwdriver
-  7/16" Wrench
-  3/32" or 3MM Allen Key (if Adjustment Rod not available)




ASSEMBLY INSTRUCTIONS

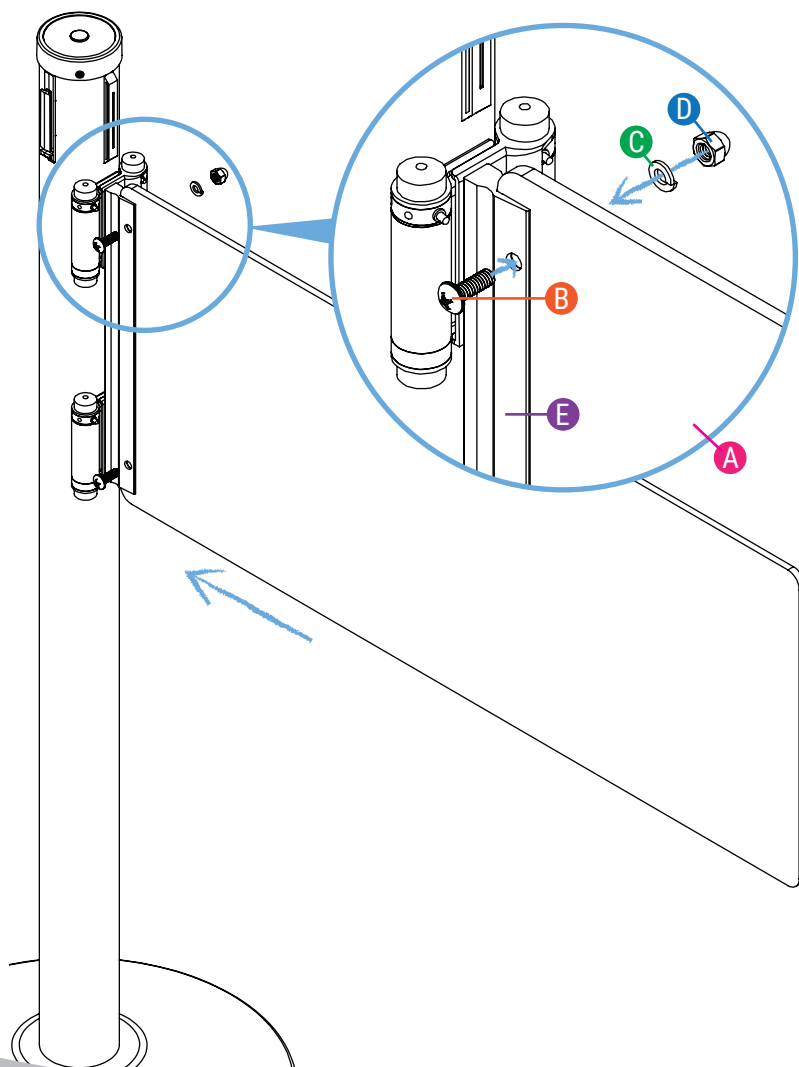

1 Attach Swing Gate panel to hinge bracket

- a) Slide **sign panel (A)** with pre-drilled holes into channel of **bracket (E)**.
- b) Align **sign panel (A)** holes with **bracket (E)** holes and install hardware: **screw (B)**, **lock washer (C)** and **cap nut (D)**.
- c) Tighten all hardware.

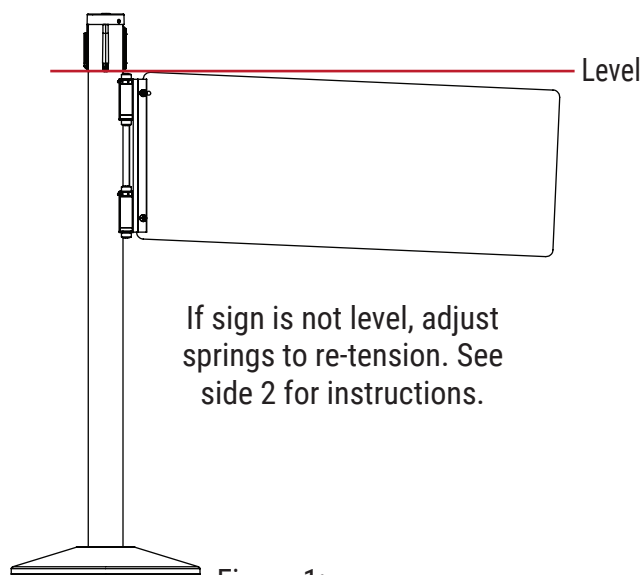


If sign is not level, adjust springs to re-tension. See side 2 for instructions.


Figure 1:
Swing Gate assembly with unlevelled sign

SIGN LEVEL ADJUSTMENT



Note: Both hinge barrels must be adjusted. We recommend starting with right side (as shown)

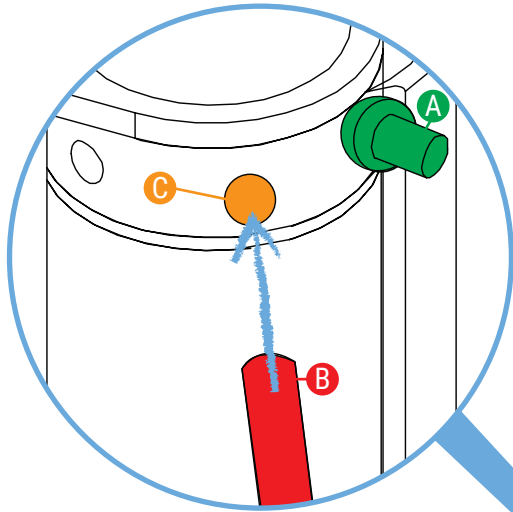


- 1** Insert **adjustment rod (B)** into **adjustment hole (C)** just to the left of the installed **stop pin (A)**.

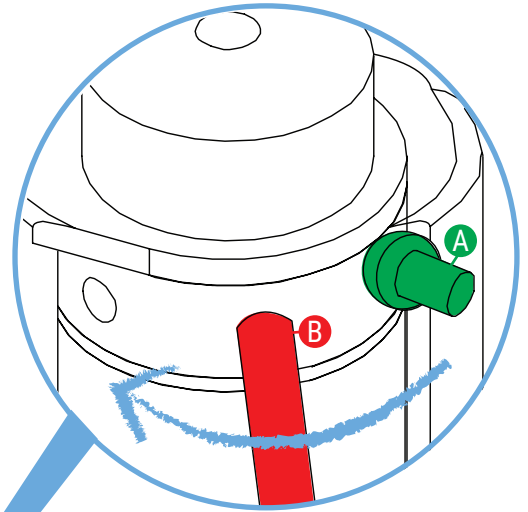

- 2** Rotate **adjustment rod (B)** clockwise away from **stop pin (A)** to reveal the next **adjustment hole (C)**.

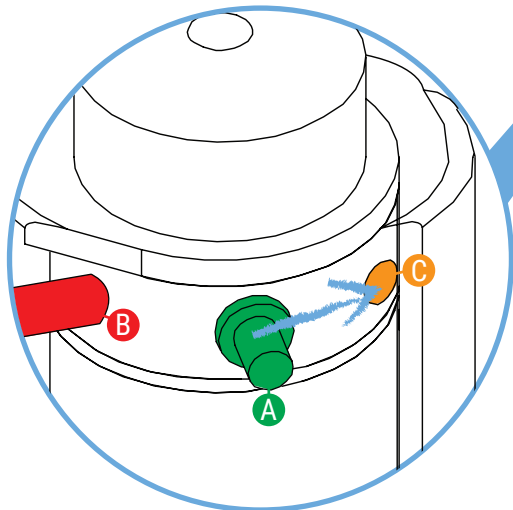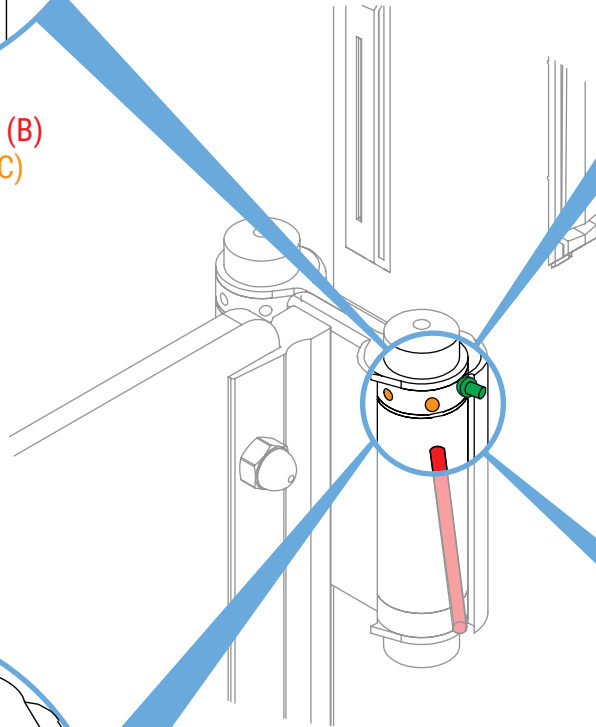

- 3** Relocate the **stop pin (A)** to the newly exposed **adjustment hole (C)** and add tension.

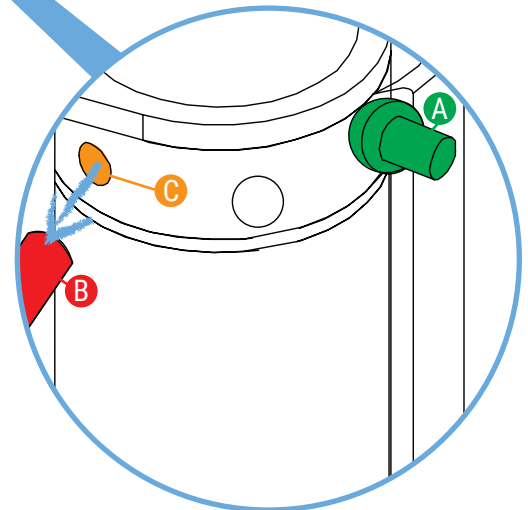

- 4** Remove **adjustment rod (B)** from **adjustment hole (C)**. Repeat for other side of hinge barrel.

Note: Repeat steps 1-4 until sign is level. Do not tension more than 3 extra holes from factory setting.

**SHOULD YOU REQUIRE ASSISTANCE, PLEASE CALL 800.448.2647
OR EMAIL SALES.INFO@TAMISMAIL.COM**